

지폐 대 · 소속기

YL-200

DESK TOP TYPE FOR PAPER TAPE



세련되고 컴팩트한 디자인에 강력한 성능

YULIM YULIM PACK & BUSINESS MACHINE CO., LTD.

YL-200 USER MANUAL

< Contents >

1. For your safety	3
2. Introduction	4
3. Packing details	5
4. Assembly diagram	5
5. How to put in and remove tape	6
6. How to operate	7
7. How to control temperature	8
8. How to control tension	8
9. Product specifications	9
10. Safety precautions	10
11. Product warranty	11

1. For your safety



For your safety

Please carefully read this user manual before operating the binder.



Maintenance requirements

1. Make sure AC 220V power is supplied. The voltage fluctuation must be kept at a minimum.
2. High temperature, high humidity or any other environmental conditions may render the unit not operational due to the tape being jammed around the roller or otherwise.
3. Please clean the unit once every week. It is particularly important to keep the roller clean.
4. Warranty is void if the unit is tampered with or disassembled by anyone other than the designated service personnel.
5. Touching the heater when the unit is operational or within 10 minutes from the shutdown of the machine may cause a burn injury.
6. Make sure the power is off after using the unit.

2. Introduction

Automatic binding with tape and film (YL-200)

The ease of installation and compactness of the YL-200 makes efficient use of office space.

The YL-200 automatically replenishes tape, eliminating any extra work to replenish tape. This feature is very fast and accurate.

The YL-200 binds up to 100 notes into a bundle with paper strips and straps up to 10 100-note bundles with film strips, requiring only minimal operation.

The strapping performed by the YL-200 results in a greater strapping strength (hereinafter referred to as "tension") than PP band strappers. Tension may be controlled from 3 to 15 kg. It also minimizes damage to banknotes, a major drawback of PP band strappers.


The YL-200 does not produce hazardous materials when using the film supplied by Yulim P&B.

3. Packaging details

Make sure the following components are in place.

- 1. Body case.....1
- 2. Left and right tape guides1 each
- 3. Stainless top plate.....1
- 4. Handled bolts2
- 5. Spare fuse1
- 6. Power cable1


4. Assembly diagram

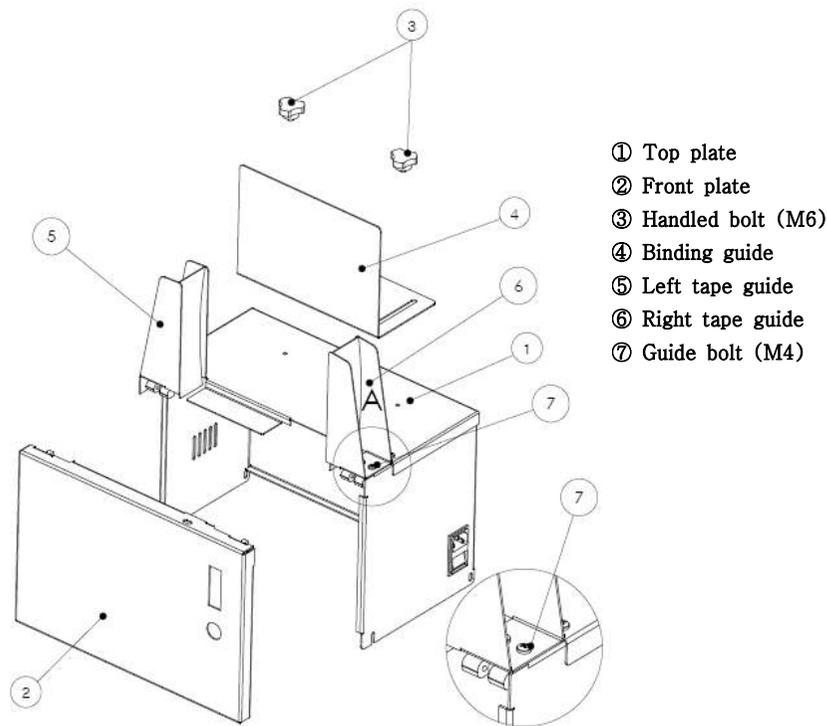

- ① Top plate
- ② Front plate
- ③ Handled bolt (M6)
- ④ Binding guide
- ⑤ Left tape guide
- ⑥ Right tape guide
- ⑦ Guide bolt (M4)

5. How to put in and remove the tape

1. Open the front plate. If the power is on, the lamp of the ① power switch will start blinking. Put tape in ② the tape holder. Make sure paper tape will unroll in the right direction.
2. Hold the end of the tape, push it through ③ the guide roller and then between ④ the upper roller and ⑤ the lower roller. Press ⑥ the Automatic/Forward button, then the rollers will turn to move the tape forward. At this point, let the tape rolled in as shown in the picture.
3. If too much of the tape is rolled in or jammed around the rollers, press ⑦ the Start/Reverse button and then the roller will turn the other way around to remove the tape.
4. Adjust the tape feeding control volume to control the length of the tape to feed the unit with. Turn the volume to your way or the other way to increase or decrease the length, respectively.
5. Close the front plate, then all the lamps will turn off, and the heater will be on. If the current temperature is far below the set value, ⑦ the Start/Reverse button will be lit up. If it is a little below the set value, ⑥ the Automatic/Forward button will be lit up. If ① the power switch blinks, it indicates that the current temperature has reached the set value, when pushing ① the power switch will cause any leftover tape will be cut off, and new tape will be put in place.

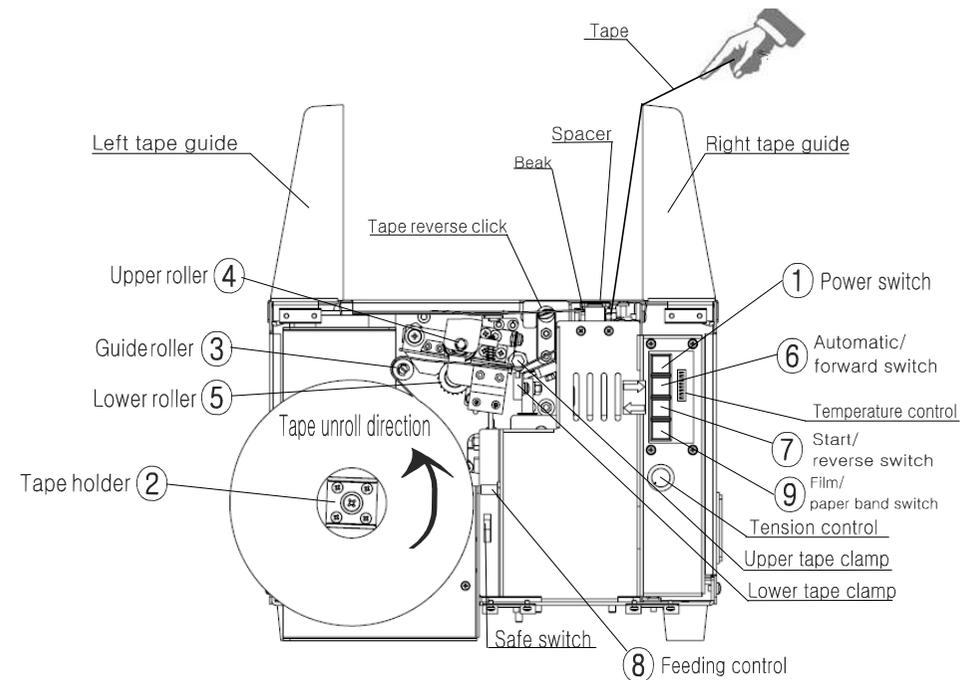


(Note: Make sure any creased part of paper is cut off after any jamming occurs.)

6. How to operate


Preparations

- ① Connect the power cable to the power inlet (the fuse holder and power switch are integrated).
- ② Turn the power switch on.
- ③ Feed the unit with tape as explained above.

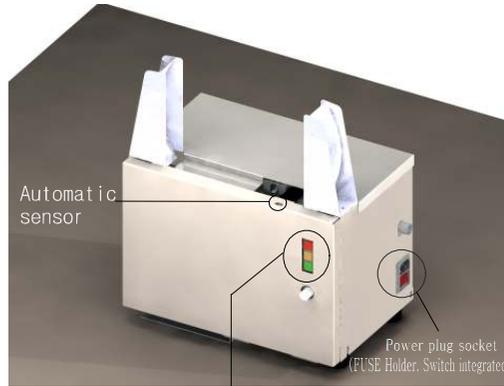

Manual mode

- ① The unit is in the manual operation mode after tape feeding.
- ② Put the objects to be bundled inside the tape ring.
(The start button will start blinking if the automatic sensor detects the objects.)
- ③ Press the start button. The binding operation will begin, and the tape will be spliced and cut off at the same time.
After binding, more tape will be in place for the next bundle.
This is how binding and strapping are performed.

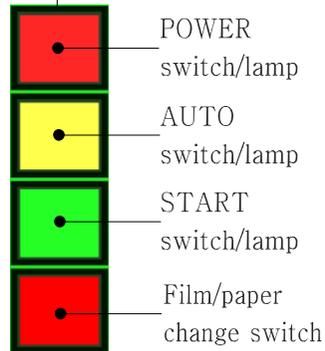

Automatic mode

- ① Press the automatic button, then the Automatic button will be lit up and the unit switches to the automatic mode.
- ② Put the objects to be bundled inside the tape ring in place.
- ③ The objects are automatically bundled when the sensor detects them.

In the automatic mode, Bundling is performed without the Start button being pushed.


7. How to control temperature

Set the dip switches to set the optimal temperature for the material of the tape and other conditions. You may open the front plate to set the applicable dip switch for the desired temperature.

Example)


For film tape, set the switch no. 3 to set the temperature at 180°C.

For paper tape, set the switch no. 3 to set the temperature at 160°C.

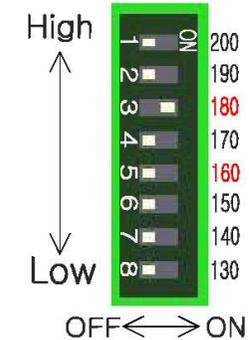

8. How to control tension

Use the tension control to adjust the strapping strength.

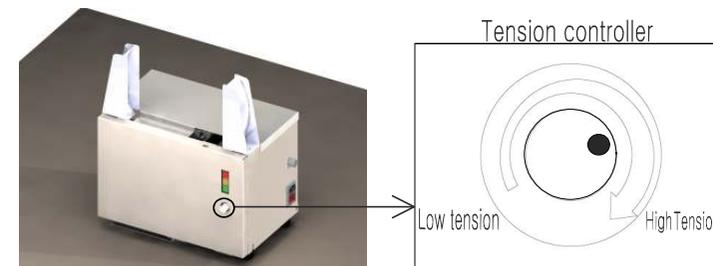

(Note: In the binding mode, tension is not adjustable.)

9. Product specifications

Speed	Binding (paper)	20 cycles/minute
	Strapping (film)	15 cycles/minute
Tension	Binding (paper)	3 ~ 8kg (adjustable)
	Strapping (film)	5 ~ 15kg (adjustable)
Maximum dimensions of the bundle	200 (W) × 170 (H) mm	
Power supply	AC 220/230V 50/60Hz 1.6A	
Power consumption	150W	
Heater	Plate type	
Tape width	30mm (both paper and film)	
Product dimensions	324 (W) × 240 (D) × 210 (H) mm	
Weight	19kg	

Note :

Use of the tape supplied by Yulim P&B is recommended to maintain the performance of the binder.

10. Safety precautions

Note : Store the binder in a dry and cool place. Exposure to high temperature or high humidity may result in the explosion of the binder and/or a fire.



Do not open the case, or you may risk electric shock.



Do not touch the cutter.
The sharp blade may cause a serious injury.



Do not touch the heater.
The high temperature may cause a burn.

To avoid malfunctioning of the unit, do not touch any components inside.

PRODUCT WARRANTY

Yulim P&B warrants that it will repair and replace parts in accordance with the following terms if any defects in the material or workmanship of the binder occurs within 12 months of the day on which the user purchases it.

You have to present a purchase receipt or any other evidence of the date of purchase to receive services under this Warranty.

Warranty terms

This warranty is valid only the product is used and handled in a normal and resonable manner in accordance with the User Manual and installation instructions.

Paid services

* Please carefully read the User Manual as you will be charged for any services requested unless the product malfunctions.

* The product is uncovered if damage or defects have occurred due to:

- customer misuse or unauthorized tampering or repairs;
- the use of any other parts than those designated by Yulim P&B; or
- an act of God or the service life of any expendable parts being expired.

Model		Applicable bands	
Date of purchase		Serial no.	
Purchased at			

Yulim Pack & Business Machine Co., Ltd.

Tel : +82-2-974-3211 Fax : +82-2-974-3272

e-mail : yulimb@chol.com

URL : <http://www.yulimprnb.com>

지폐 대 · 소속기

YL-200

DESK TOP TYPE FOR PAPER TAPE

주요 기능

- 지폐대속기와 지폐소속기를 하나로...
(하나의 기계로 대속과 소속 업무 가능)
- 완전 자동결속 시스템
- 유해가스 발생 제로
- 30mm 필름 및 종이 결속으로 지폐 손상제로
- 강력한 힘 - 최대 텐션 15kg
(동 기존 제품의 3배)
- 기계의 소형화로 출납공간 극대화

결속상태



소모품



제품 사양

	대속업무 시	소속업무 시
결속속도	15 Cycles/minute	20 Cycles/minute
결속강도	5~15Kg	3~8Kg
사용밴드	필름밴드	종이밴드

제품 제원

- 결속물 크기 : 200(폭) X 170(높이) mm
- 규 격 : 324(W) X 240(D) X 210(H) mm
- 필 림 폭 : 30mm
- 무 게 : 19kg
- 전 원 : 220V 50/60Hz 1.6A



* 본제품의 사양은 예고없이 변경될 수 있습니다.



(주)유림피앤비

서울시 노원구 하계동 250-3 하계테크노타운 A704호

Tel : 02-974-3211 Fax : 02-974-3272

E-mail : yulimb@chol.com

Homepage : www.yulim.biz www.yulimprnb.com